



DRIVER : OKI MSM58292, HD61603

-DP -2

PIN NUMBER	SEGMENT	PIN NUMBER	SEGMENT	PIN NUMBER	SEGMENT
1	COM	24	3D	47	4B
2	8E	25	3C	48	4A
3	8D	26	3DP	49	4F
4	8C	27	2E	50	4G
5	8DP	28	2D	51	L2
6	7E	29	2C	52	5B
7	7D	30	2DP	53	5A
8	7C	31	1E	54	5F
9	7DP	32	1D	55	5G
10	COM	33	1C	56	6B
11	6E	34	1B	57	6A
12	6D	35	1A	58	6F
13	6C	36	1F	59	6G
14	6DP	37	1G	60	L3
15	5E	38	2B	61	7B
16	5D	39	2A	62	7A
17	5C	40	2F	63	7F
18	5DP	41	2G	64	7G
19	4E	42	L1	65	8B
20	4D	43	3B	66	8A
21	4C	44	3A	67	8F
22	4DP	45	3F	68	8G
23	3E	46	3G		